


Attaching items to showroom trailer reinforced wall


1. Reinforcement location

There are perforated steel sheets installed in showroom trailer left side walls and rear walls (unless otherwise requested). Positioning of the steel sheets are following:

- Rear wall

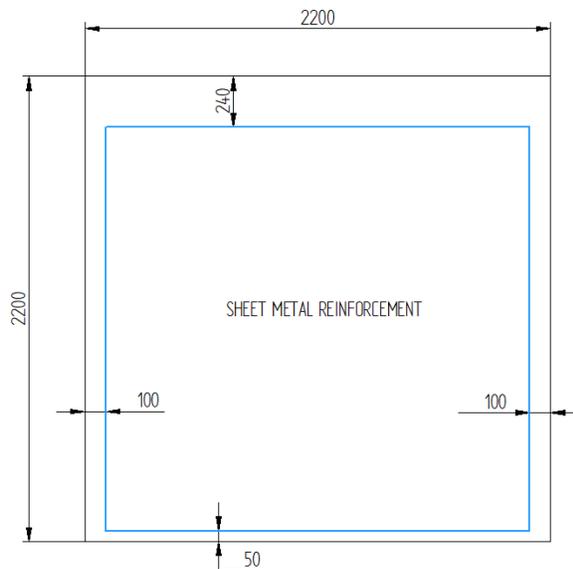

- Left side wall of 420 model

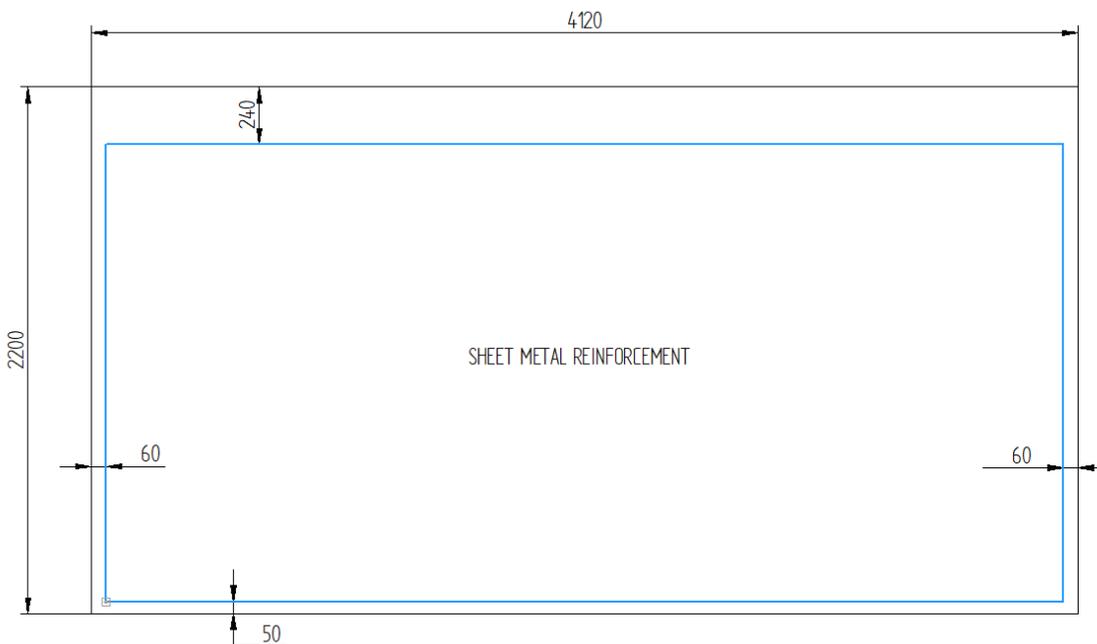

- Left side wall of 520 model



- Left side wall of 620 model



2. Maximum load for attachments

The maximum permissible load for attaching items to a reinforced wall is $50\text{kg}/\text{m}^2$. **The maximum permissible load only applies, if the items are mounted to walls according to this manual.**

3. Fixing items to reinforced walls

The items need to be fixed to the reinforced wall with sheet metal screws (NOT self-drilling) **AND** adhesive. The diameter of the screw must be at least 4mm. Choose the length of the screw according to

attached material thickness, keep in mind that the screw must enter the panel at least 20mm and at most 35mm. At least 6 screws are required per m².



Choose the adhesive according to the material to be attached. Recommendations for universal adhesives are following:

- Casco XtremFix+



- Moment One For All



- Moment FIX Express



- Or similar.

NB! APPLY THE ADHESIVE ACCORDING TO THE INSTRUCTIONS PROVIDED WITH THE ADHESIVE!